



# SPOUSE**BUSTERS**

unlocking the truth

*HD Mini USB Wall Charger Hidden Spy Camera*



## CONTACT US

Phone: 1300 776 873 | Fax: (02) 8088 7328 | Web: [www.spousebusters.com.au](http://www.spousebusters.com.au)

**Price: \$500+GST**


## Overview

### HD Mini USB Wall Charger Hidden Spy Camera

The Spousebusters HD Mini USB Wall Charger Hidden Spy Camera is a functional USB charger that also features a built in high definition hidden camera. Videos are recorded to a 32GB memory card and can be played back on both PC and Apple computers. The camera records in continuous or motion activated recording mode, and is easy to operate. It is ready to go out of the box - just plug it into an AC outlet, and it will start recording. With auto-overwrite "loop recording", it will record over the oldest files if the memory card fills up, so you'll never miss the most recent activity.

## Features

- ✓ HD Mini USB Wall Charger Spy Camera
- ✓ 32GB SD Card
- ✓ SD Memory Card Reader
- ✓ Male to Male USB Cable
- ✓ Dimensions: 30 x 30 x 45mm
- ✓ Quick start guide

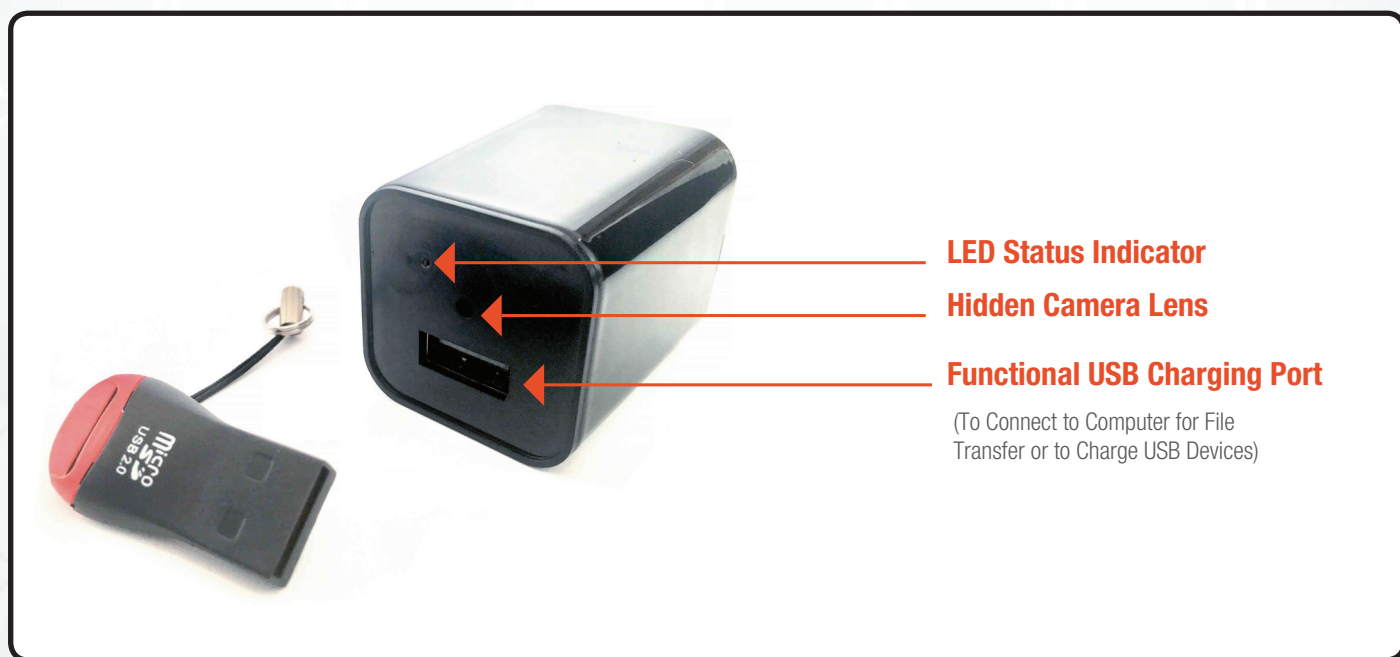

**SPOUSEBUSTERS**  
unlocking the truth

### Contact us:

Phone: 1300 776 873 | Fax: (02) 8088 7328

Website: [www.spousebusters.com.au](http://www.spousebusters.com.au)





## Getting Started

The camera comes equipped with a 32GB memory card inside, so there are no memory cards to worry about. There are also no visible switches or buttons, which helps make this camera completely covert.

What makes this camera so easy to use is that you can take it right out of the box, and plug it into the wall outlet with no configuration needed. The default recording method is set as a Motion Activated.

The only optional setting you may want to adjust is the time and date stamp that is displayed on the video, which is quick and easy to set.

## Recording Video

The charger camera records video continuously or motion activated, so to start recording, simply plug it into any standard AC power outlet. It can be plugged into a wall outlet, or even a surge protector. To adjust the viewing angle, we recommend plugging it into an 3' or 6' extension cord, which can then allow you to aim the camera in whichever direction you need it.

After the camera is plugged into power, the LED indicator will flash blue 3 times and then go out, which indicates video recording has started. Video files will be saved in 5 minutes intervals, and the device will continue to record until you unplug it.

The camera features an "auto overwrite" or "loop recording" feature, which will automatically overwrite the oldest files if the internal memory fills up, so you won't miss the latest activity if the 32GB of memory fills up.

## Viewing Recorded Videos and Photos

To view your recorded videos and photos, Connect the camera to your computer using the supplied USB cable or remove the memory card and use the card reader supplied.

Once the camera is connected, click "Open folder to view files" and browse to the DCIM folder on the camera drive. You'll see a list of all the videos recorded by the camera. Click on the video files to play. You can also copy them to your computer and delete them off the device to continue using the device again.

Note: If the video is playing all black, your computer's video drivers may be out of date. We recommend downloading VLC Media Player, a free download for both PC and Mac computers available at <http://www.videolan.org/vlc>.

## Charging a USB Device

To use this device as a regular USB wall charger to charge your phone or other small USB device, first plug the charger camera into a regular AC power outlet (or extension cord or surge protector). Next, use your phone's charging cable and plug the USB end into the charger. The charger will provide power and charge your device as long as it's plugged into the outlet.



**SPOUSEBUSTERS**  
unlocking the truth

### Contact us:

**Phone:** 1300 776 873 | **Fax:** (02) 8088 7328

**Website:** [www.spousebusters.com.au](http://www.spousebusters.com.au)

